


Inlet Options

Spare Parts List

HV07

Different options, PS, PB, Y, P1B etc.

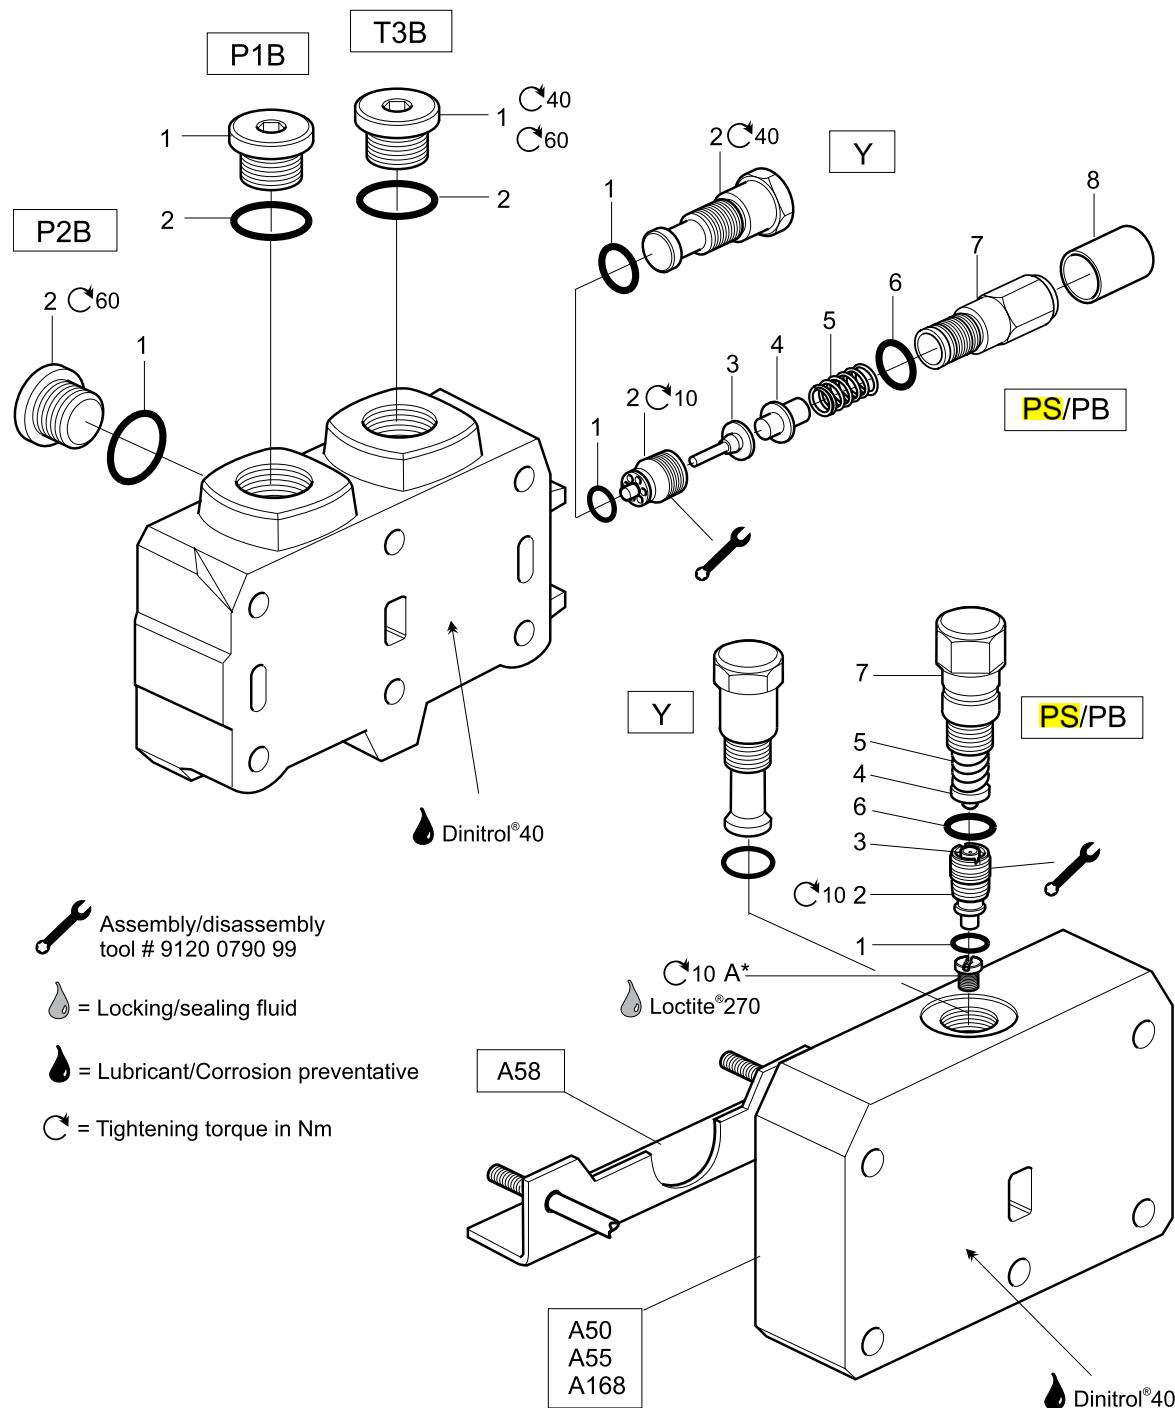


Inlet Options

Spare Parts List

HV07

Pump unloading inlet

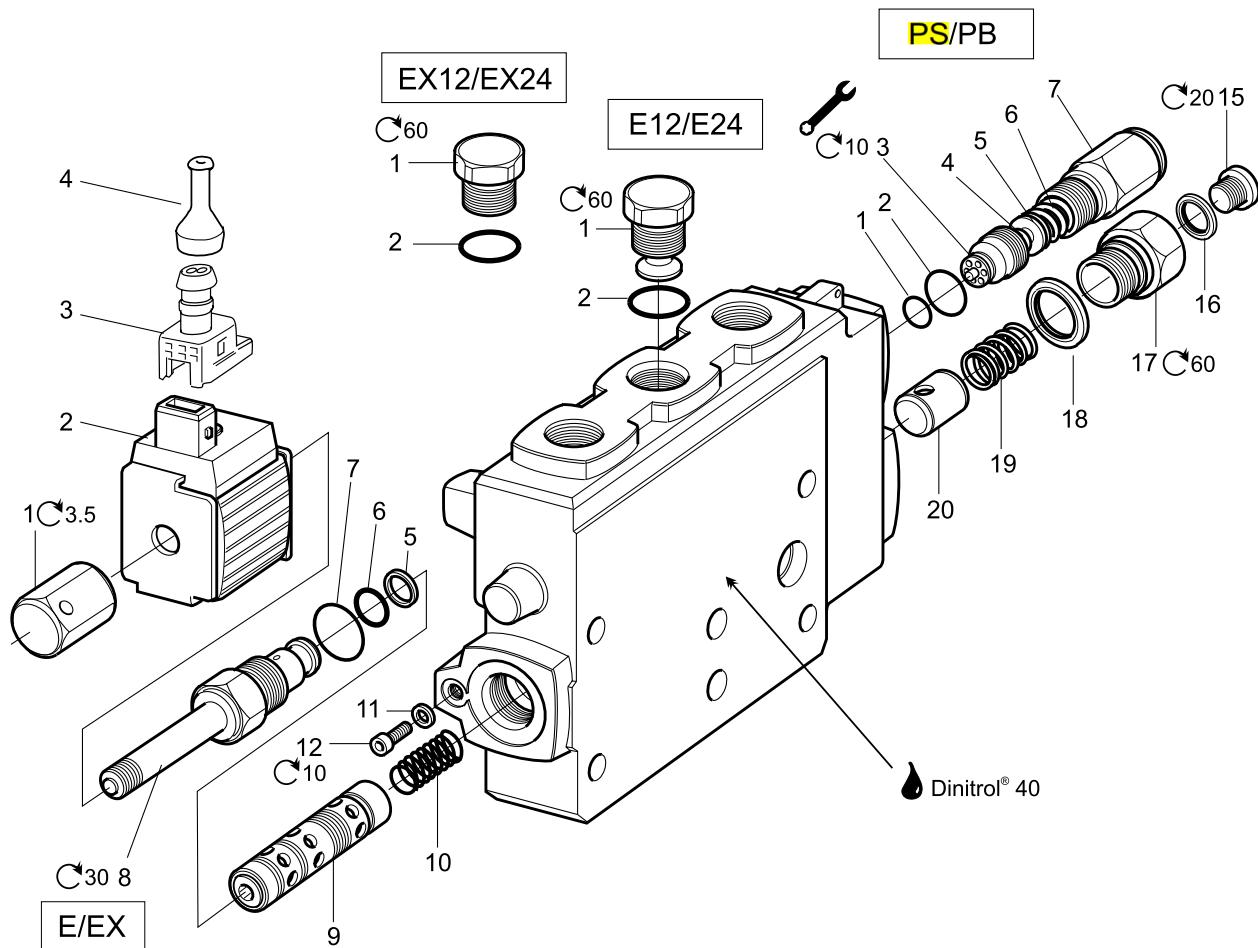

滴 = Lubricant/Corrosion preventative

C = Tightening torque in Nm

扳手 = Assembly/disassembly tool # 9120 0790 99

Inlet Options

Spare Parts List

HV07