

UNIMOG

OPTION CODE N16

Hydraulic power - the easy way

Three steps to hydraulic power for your Unimog:

1. Begin with the transmission adaptor!
2. Select your required pump size from the chart below!
3. Select a suction connector to fit your application!

1 adaptor...




...3 pump sizes...



...2 suction connectors



Engine speed, rpm

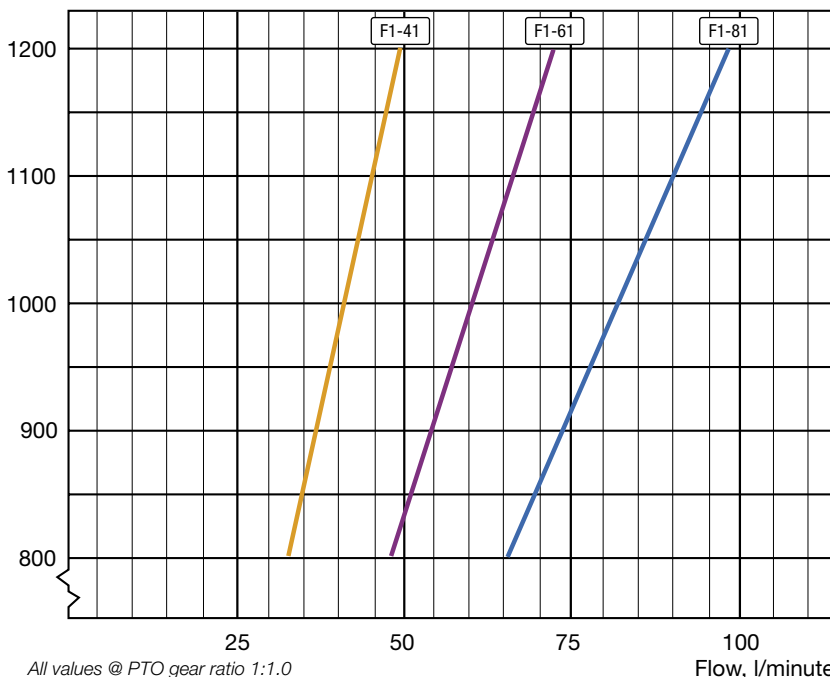

All values @ PTO gear ratio 1:1.0

ORDERING INFORMATION

PUMP	PARKER PART #	MERCEDES-BENZ PART #
F1-41	378 1040	A001 553 56 01
F1-61	378 1060	A001 553 57 01
F1-81*	378 1080	A001 553 58 01
ADAPTOR		
PTO N16	370 5750	A000 550 02 45
SUCTION CONNECTOR		
45° 2"	378 0364	A000 997 28 70
45° 2 1/2"	378 0634	A000 997 29 70

* 2 1/2" suction connector is recommended for the F1-81.



www.parker.com



PTO adapter for Unimog

Max continuous output torque, Nm	400
Overall Ratio	1:1/1:1.36
Pump rotation	R/L
Part number	3705750
