

Ordering-key Servo H

1 2 3 4 5

SERVO - **H5** - **90** - **4** - -

Type of Servo Module	
H1	Single proportional valve
H2	Single proportional valve, pneumatic push button integrated in to lever (only 90° rotated)
H3	Single proportional valve, stand alone version
H4	Single proportional valve, mechanical lock for fixed preset position from lever
H5	Single proportional valve with electric switch integrated in to lever
H6	Single proportional valve with 3 positions electric switch
H1+H1	Double proportional valve
H1+H5	Double proportional valve, - one lever without extra button - one lever with electric switch,
H1+H6	Double proportional valve - one lever without extra button - one lever with 3 positions electric switch

Execution	
-	Standard
SU	Special execution

Port connections (outlet)	
11	1/8" BSP
4	Push in Ø 4 (standard)
6	Push in Ø 6

Assembling direction of lever	
0	in-line
90	Handle actuation 90° rotated

Standard order codes

Single	Order code	Double	Order code
Servo H1-0-4	3500600	Servo H1+H1-4	3501200
Servo H1-90-4	3501400	Servo H1+H5-4	3501900
Servo H2-90-4	3501500	Servo H1+H6-4	3522800
Servo H3+H1-0-4	3500800		
Servo H3+H4-0-4	3512900		
Servo H3+H5-0-4	3519300		
Servo H4-0-4	3500900		
Servo H4-90-4	3501600		
Servo H5-0-4	3501000		
Servo H5-90-4	3501700		
Servo H6-0-4	3514600		

For central air supply and exhaust of a module or complete pre-assembled Servo H-unit a connection flange is always required. More information can be found on page 8.

