

# **PT Series**

### PT4 Parts List

INDEX	PART DESCRIPTION	PART NUMBER
1	PT4-1-02Q-25 psid bypass	936742
	PT4-1-05Q-25 psid bypass	936743
	PT4-1-10Q-25 psid bypass	936744
	PT4-1-20Q-25 psid bypass	936745
	PT4-2-02Q-25 psid bypass	936746
	PT4-2-05Q-25 psid bypass	936747
	PT4-2-10Q-25 psid bypass	936748
	PT4-2-20Q-25 psid bypass	936749
	PT4-3-02Q-25 psid bypass	936876
	PT4-3-05Q-25 psid bypass	936877
	PT4-3-10Q-25 psid bypass	936878
	PT4-3-20Q-25 psid bypass	936879
2	PT4 DIE CAST SAE-16 (1.312-12 UN-2B)	941417
	PT4 DIE CAST SAE-20 (1.625-12 UN-2B)	941448
	PT4 DIE CAST 1" NPT (1.000-11.5 NPTF-1)	941449
	PT4 DIE CAST 1 1/4" NPT (1.250-11.5 NPTF-1)	941450
	PT4 DIE CAST G1" BSPF	941905
	PT4 DIE CAST G1 1/4" BSPF	941906
3	O-RING	941664
4	1/8-27 PIPE PLUG	900782
5	1/8-27 PRESSURE GAUGE	936912

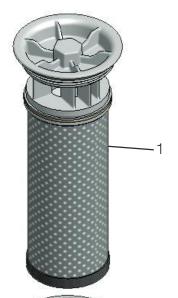

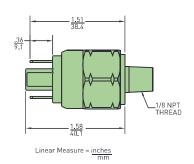

926923 2-pin normally open switch



## **PT Series**

### Tank top filters

### How To Order

Select the desired symbol (in the correct position) to construct a model code.

#### Example:

BOX 1	B0X 2	B0X 3	BOX 4	BOX 5	BOX 6	B0X 7	BOX 8
PT2	1	10Q	В	G	G	516	1

BOX 1: Filter Series		
Symbol	Description	
PT2	Basic Model, 25 gpm	
PT4	Basic Model, 50 gpm	

BOX 2: Length	1
Symbol	Description
1	Single
2	Double
3	Triple (PT4 only)

BOX 3: Media Code		
Symbol	Description	
02Q	Microglass, 2 micron	
05Q	Microglass, 5 micron	
10Q	Microglass, 10 micron	
20Q	Microglass, 20 micron	

BOX 4: Seals		
Symbol	Description	
В	Nitrile	
V	Fluorocarbon	

BOX 5: Indicator		
Symbol	Description	
Р	Plugged Ports	
G	Pressure Gauge, 25 psi	
S	Pressure switch	

BOX 6: Bypass		
Symbol	Description	
G	25 PSI (1.7 bar)	

BOX 7: Ports		
Symbol	Description	
	PT2	
G12	G3/4" BSPP <sup>2</sup>	
G16	G1 BSPP <sup>2</sup>	
N12	3/4" NPT	
N16	1" NPT	
S12	SAE-12	
S16	SAE-16	
	PT4	
G16	G1" BSPP <sup>2</sup>	
G20	G1-1/4" BSPP <sup>2</sup>	
N16	1" NPT	
N20	1-1/4" NPT	
S16	SAE-16	
S20	SAE-20	

BOX 7: Options		
Symbol	Description	
1	None	
W <sup>3</sup>	Steel weld ring	

#### Notes:

- 1. The filters include the element you
- select already installed.

  When "G12", "G16" or "G20" are selected in Box 7, "P" must be selected in Box 5. BSPP Gauge and Switch are available as separate
- accessory components.

  3. When "W" is selected in Box 8, the PT2 port options are "N12" and "S12"; the PT4 port options are "N16" and "S16".

Please note the bolded options reflect standard options with a reduced lead time.