


# Adapter aus Messing vernickelt

## 0914 Winkelstück, Außengewinde BSPT


Messing vernickelt

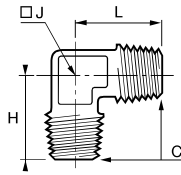

C		H	J	L	kg
R1/8	<a href="#">0914 00 10</a>	17	10	17	0,010
R1/4	<a href="#">0914 00 13</a>	22,5	12	22,5	0,022
R3/8	<a href="#">0914 00 17</a>	25,5	15	25,5	0,034
R1/2	<a href="#">0914 00 21</a>	30	19	30	0,059
R3/4	<a href="#">0914 00 27</a>	34,5	22	34,5	0,104
R1	<a href="#">0914 00 34</a>	40,5	28	40,5	0,156

## 0910 Y-Verteiler, Innengewinde BSPP


Messing vernickelt

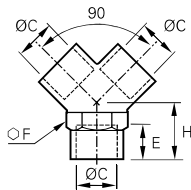

C		E	F	H	kg
G1/8	<a href="#">0910 00 10</a>	8	13	12	0,018
G1/4	<a href="#">0910 00 13</a>	11	17	14	0,034
G3/8	<a href="#">0910 00 17</a>	11,5	20	16	0,045
G1/2	<a href="#">0910 00 21</a>	14	25	19	0,086

## 0911 Y-Verteiler, Außengewinde BSPT/Innengewinde BSPP


Messing vernickelt

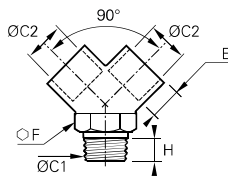

C1	C2		E	F	H	kg
R1/8	G1/8	<a href="#">0911 00 10</a>	8	13	8	0,022
R1/4	G1/4	<a href="#">0911 00 13</a>	11	17	11	0,039
R3/8	G3/8	<a href="#">0911 00 17</a>	11,5	20	11,5	0,051
R1/2	G1/2	<a href="#">0911 00 21</a>	14	25	14	0,105

## 0915 T-Stück, Innengewinde BSPP und metrisch


Messing vernickelt

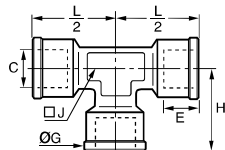

C		E	G	H	J	L/2	kg
M5x0,8	<a href="#">0915 00 19</a>	5	8	11	9	11	0,010
G1/8	<a href="#">0915 00 10</a>	8	13	18,5	10	18,5	0,022
G1/4	<a href="#">0915 00 13</a>	11	17	22,5	12	22,5	0,042
G3/8	<a href="#">0915 00 17</a>	1,5	21	25,5	15	25,5	0,062
G1/2	<a href="#">0915 00 21</a>	14	26	30	19	30	0,099
G3/4	<a href="#">0915 00 27</a>	16,5	32	35,5	22	35,5	0,145
G1	<a href="#">0915 00 34</a>	18	38,5	40,5	28	40,5	0,233

## 0923 T-Verschraubung, Außen-/Innengewinde metrisch

Messing vernickelt

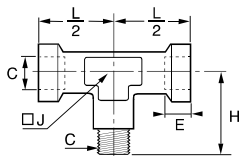

C		E	G	H	J	L/2	kg
M5x0,8	<a href="#">0923 00 19</a>	4	8	11,5	9	11	0,009